




FlowCom™ Register

DIGITAL DATA & COMMUNICATIONS

FlowCom Grounding Kit - Quick Start Instructions

Required For Installations With VFD Pumps
Recommended For FlowComs With 4-20mA Outputs

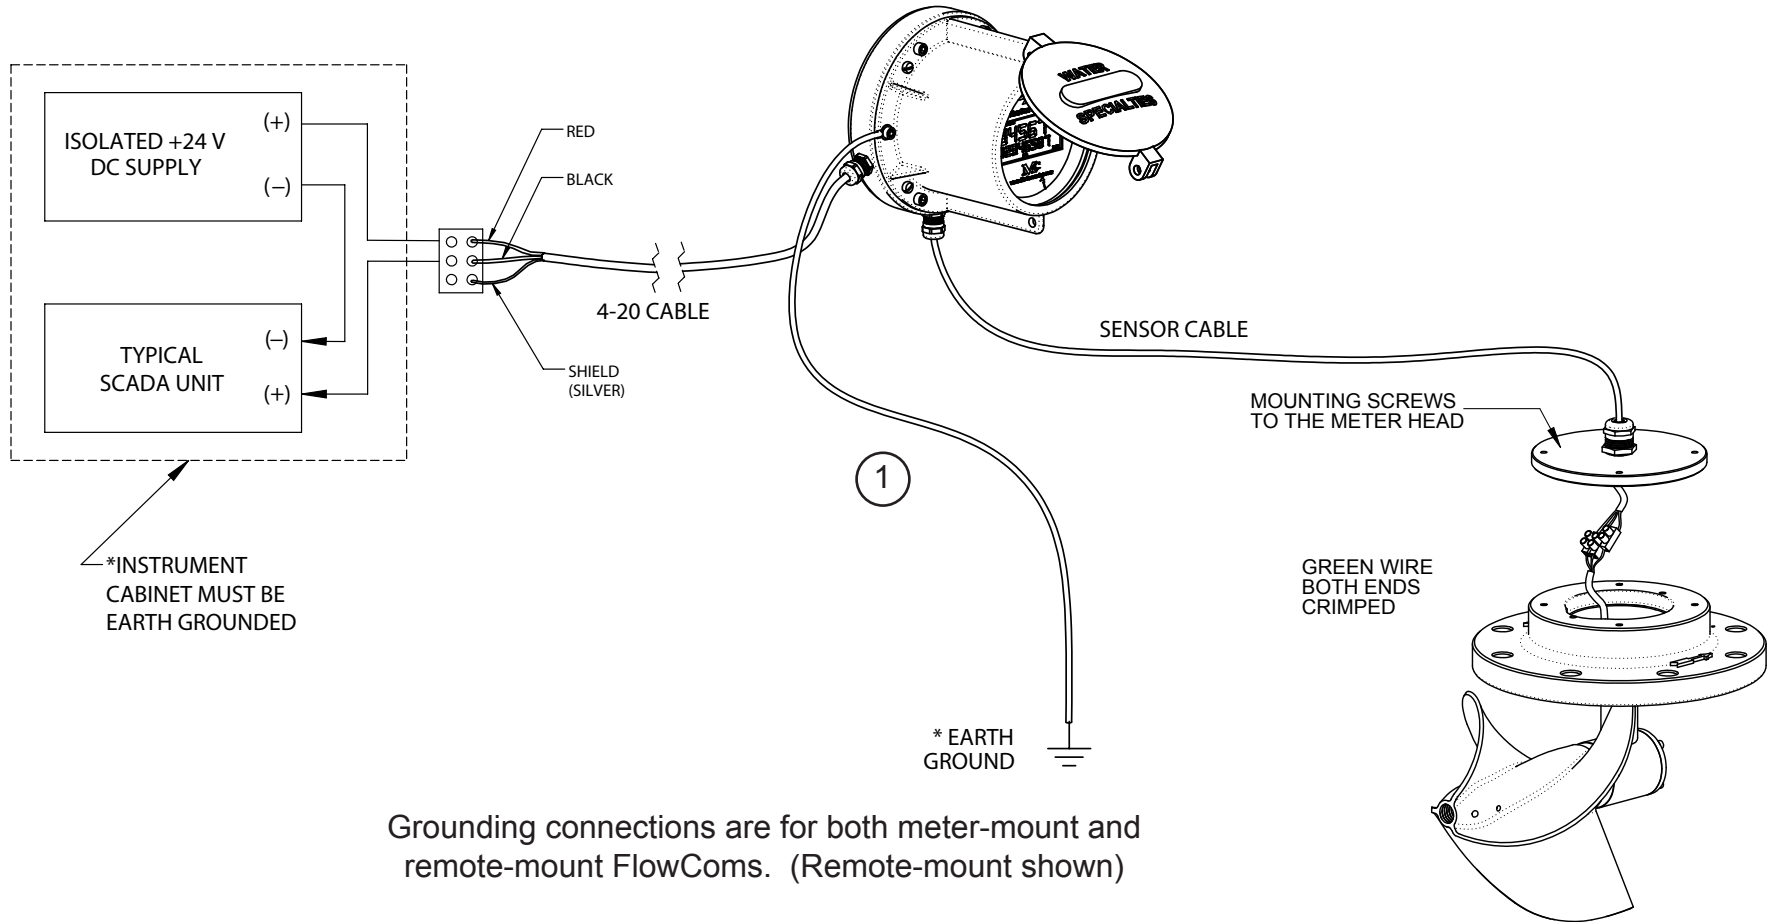

1. **Connect FlowCom Green Wire To A Good Earth Ground:** Remove any screw from the FlowCom bonnet and attach the green wire with eyelet to the screw. Re-insert the screw. Connect opposite end of green wire to a good earth ground* near the FlowCom unit.

***Good Earth Ground:** A connection to a buried metal pipe or a local grounding rod.

ATTENTION!

FlowCom Grounding Kit Quick Start Instructions

**Required For Installations With VFD Pumps
Recommended For FlowComs With 4-20mA Outputs**

ATTENTION!

FlowCom Grounding Kit Quick Start Instructions

**Required For Installations With VFD Pumps
Recommended For FlowComs With 4-20mA Outputs**

ATTENTION!

FlowCom Grounding Kit Quick Start Instructions

**Required For Installations With VFD Pumps
Recommended For FlowComs With 4-20mA Outputs**

ATTENTION!

FlowCom Grounding Kit Quick Start Instructions

**Required For Installations With VFD Pumps
Recommended For FlowComs With 4-20mA Outputs**