

QUICK START

For the ML255 Battery Powered Converter


This describes how to install the batteries and start up the ML255 for the first time.

Step 1 Install the batteries

Note: Ensure there is no power connected externally and that the battery DIP switches are in the OFF position.

Note: If batteries are already installed, begin with step 5.

1. Remove the battery holder from the ML255 converter by removing the two screws and lock washers holding it in place.
2. Place two double battery packs (part number AGM009) on the ML255 battery holder.
3. Secure the battery packs to the battery holder using tie wraps.
4. Re-install the battery holder into the converter using the previously removed screws and washers.
5. Plug the battery pack connectors into the B1 and B2 sockets on the main board.
6. Wait one minute.
7. Move battery DIP switch B1/B2 to ON. The converter will start to power up and the red CPU LED will turn on solid. It will then begin flashing after it completes booting. Powering up may take 2-3 minutes.

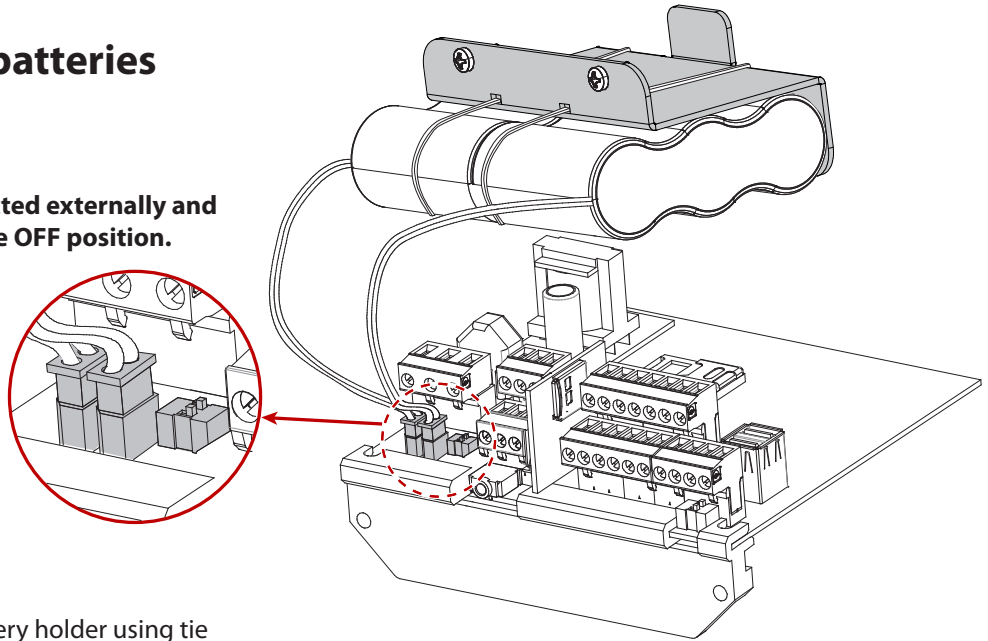

Step 2 Set the time and date

Up/Down Key



Right/Left Key



Enter/Esc Key



Each time the ML255 is powered up, the time and date need to be set immediately after the system finishes initialization.

1. Allow the converter to complete its initialization sequence.
2. Press the **Enter/Esc** button to open the **Quick Start** menu. If the **Quick Start** menu is not enabled, skip step 3.
3. Navigate to the **Main Menu** using the **Up/Down** arrow key and press **Enter**.
4. Enter your level 2 access code (default is 000002) and press **Enter**.
5. Navigate to **9-Data logger** with the **Up/Down** arrow key and press **Enter/Esc**.
6. Select the time and date and press **Enter** to edit.
7. Using the **Right/Left** arrow key to navigate and the **Up/Down** arrow key to change the data, enter the date and time. Press **Enter/Esc** to accept the date and time.
8. Long press the **Enter/Esc** key twice to return to the main display.