




**FlowCom™ Register**

DIGITAL DATA & COMMUNICATIONS

# FlowCom Grounding Kit - Quick Start Instructions

Required For Installations With VFD Pumps  
Recommended For FlowComs With 4-20mA Outputs

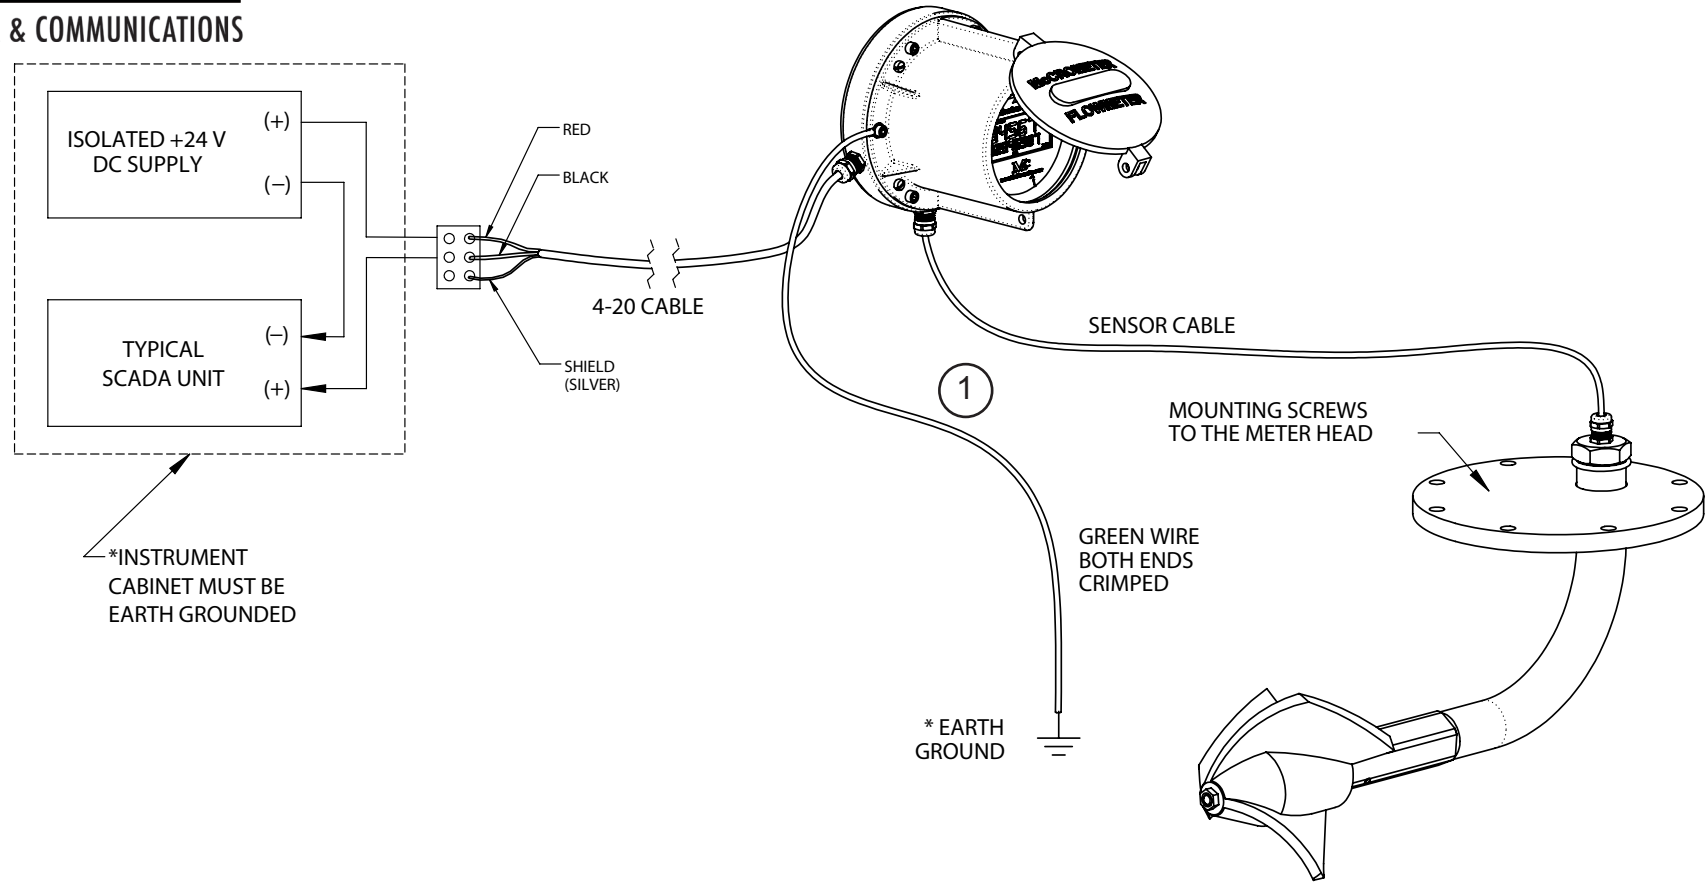

\*INSTRUMENT  
CABINET MUST BE  
EARTH GROUNDED

\* EARTH  
GROUND

Grounding connections are for both meter-mount and remote-mount FlowComs. (Remote-mount shown)

1. **Connect FlowCom Green Wire To A Good Earth Ground:** Remove any screw from the FlowCom bonnet and attach the green wire with eyelet to the screw. Re-insert the screw. Connect opposite end of green wire to a good earth ground\* near the FlowCom unit.

\***Good Earth Ground:** A connection to a buried metal pipe or a local grounding rod.

# **ATTENTION!**

## **FlowCom Grounding Kit Quick Start Instructions**

**Required For Installations With VFD Pumps  
Recommended For FlowComs With 4-20mA Outputs**

# **ATTENTION!**

## **FlowCom Grounding Kit Quick Start Instructions**

**Required For Installations With VFD Pumps  
Recommended For FlowComs With 4-20mA Outputs**

# **ATTENTION!**

## **FlowCom Grounding Kit Quick Start Instructions**

**Required For Installations With VFD Pumps  
Recommended For FlowComs With 4-20mA Outputs**

# **ATTENTION!**

## **FlowCom Grounding Kit Quick Start Instructions**

**Required For Installations With VFD Pumps  
Recommended For FlowComs With 4-20mA Outputs**